

# ioLogik E1200 Series Quick Installation Guide

---

Ethernet Remote I/O

Edition 6.0, December 2016

## Technical Support Contact Information [www.moxa.com/support](http://www.moxa.com/support)

### Moxa Americas:

Toll-free: 1-888-669-2872

Tel: 1-714-528-6777

Fax: 1-714-528-6778

### Moxa China (Shanghai office):

Toll-free: 800-820-5036

Tel: +86-21-5258-9955

Fax: +86-21-5258-5505

### Moxa Europe:

Tel: +49-89-3 70 03 99-0

Fax: +49-89-3 70 03 99-99

### Moxa Asia-Pacific:

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

### Moxa India:

Tel: +91-80-4172-9088

Fax: +91-80-4132-1045

# MOXA®

© 2016 Moxa Inc. All rights reserved.

P/N: 1802012001015



## Package Checklist

- 1 ioLogik E1200 series remote I/O product
- Quick installation guide (printed)

## Specifications

System	
Ethernet	2 x 10/100 Mbps switch ports, RJ45
Protection	1.5 KV magnetic isolation
Protocols	Modbus/TCP, TCP/IP, UDP, DHCP, Bootp, HTTP
Power Input	24 VDC nominal, 12 to 36 VDC
Wiring	I/O cable max. 14 AWG
Dimensions	27.8 x 124 x 84 mm (1.09 x 4.88 x 3.31 in)
Weight	under 200 g
Operating Temperature	Standard Models: -10 to 60°C (14 to 140°F) Wide Temp. Models: -40 to 75°C (-40 to 167°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity	5 to 95% (non-condensing)
Altitude	Up to 2000 m
<b>Note: Contact Moxa if you require products guaranteed to function properly at higher altitudes.</b>	
Standards and Certifications	UL 508, CE, FCC Class A
Warranty Period	5 years (excluding ioLogik E1214*)
Details	See <a href="http://www.moxa.com/warranty">www.moxa.com/warranty</a>
<b>*Because of the limited lifetime of power relay, products that use this component are covered by a 2-year warranty.</b>	
Digital Input	
Sensor Type	NPN, PNP, and Dry contact
I/O Mode	DI or Event Counter
Dry Contact	<ul style="list-style-type: none"> <li>• On: short to GND</li> <li>• Off: open</li> </ul>
Wet Contact (DI to COM)	<ul style="list-style-type: none"> <li>• On: 10 to 30 VDC</li> <li>• Off: 0 to 3 VDC</li> </ul>
Isolation:	3K VDC or 2K Vrms
Counter/Frequency:	250 Hz, power off storage
Digital Output (Sink)	
I/O Mode	DO or Pulse Output
Pulse Wave Width/Frequency	1 ms/500 Hz
Over-voltage Protection	45 VDC
Over-current Protection	2.6 A (4 channels @650 mA)
Over-temperature Shutdown	175°C (typical), 150°C (min.)
Current Rating	200 mA per channel
Isolation	3K VDC or 2K Vrms
Digital Output (Source)	
I/O Mode	DO or Pulse Output
I/O Type	Source
Current	0.5A per channel


Voltage	For DIO channel: 15 to 30 VDC (ext power voltage) For DO channel: 15 to 30 VDC (ext power voltage), 12 or 9 VDC configurable by jumper.
Pulse Wave Width/Frequency	1 ms/500 Hz
Over-voltage Protection	41 VDC
Over-current Limit	6 A
Over-temperature Shutdown	175°C (typical), 150°C (min.)
Output Current Rating	1.5 A per channel
<b>Relay Output</b>	
Type	Form A (N.O.) relay outputs, 5A
Contact Rating	5 A @ 30 VDC, 5 A @ 250 VAC, 5 A @ 110 VAC
Inductance Load	2 A
Resistance Load	5 A
Breakdown Voltage	500 VAC
Relay On/Off Time	1500 ms (max.)
Initial Insulation Resistance	1G min. @ 500 VDC
Expected Life	100,000 times (typical)
Initial Contact Resistance	30 milli-ohms (max.)
Pulse Output	0.3 Hz at rated load
<b>Analog Input</b>	
Type	Differential input
Resolution	16 bits
I/O Mode	Voltage / Current
Input Range	0 to 10 VDC, 4 to 20 mA
Accuracy	±0.1% FSR @ 25°C ±0.3% FSR @ -10 and 60°C ±0.5% FSR @ -40 and 75°C
Sampling Rate (all channels)	12 samples/second
Input Impedance	10M ohms (min.)
Built-in Resistor for Current Input	120 ohms
<b>Analog Output</b>	
Resolution	12 bits
Output Range	0 to 10 VDC, 4 to 20 mA
Voltage Output	10 mA (max.)
Accuracy	±0.1% FSR @ 25°C ±0.3% FSR @ -40 and 75°C
Load Resistor	Internal register: 400 ohms
<b>Note: 24 V of external power is required when loading &gt; 1000 ohms.</b>	
<b>RTD</b>	
Input Type	PT50, PT100, PT200, PT500, PT1000
Resistance	1–310, 1–620, 1–1250, 1–2200 ohms
Sampling Rate	12 samples/sec (all channels)
Resolution	16 bits
Accuracy	±0.1% FSR @ 25°C ±0.3% FSR @ -40 and 75°C
Input Impedance	625k ohms

Thermocouple Input	
Sensor Type	J, K, T, E, R, S, B, N
Millivolt Type	$\pm 78.126 \text{ mV}$ , $\pm 39.062 \text{ mV}$ , $\pm 19.532 \text{ mV}$
Fault and Overvoltage protection	$\pm 35 \text{ VDC}$ (power off); $+30 \text{ VDC}$ , $-25 \text{ VDC}$ (power on)
Sampling Rate	12 samples/sec (all channels)
Resolution	16 bits
Accuracy	$\pm 0.1\% \text{ FSR @ } 25^\circ\text{C}$ $\pm 0.3\% \text{ FSR @ } -40 \text{ and } 75^\circ\text{C}$
Input Impedance	10M ohms


## Installation

### Jumper Settings

Models with DIO, AI, or external power channels require configuring the jumpers inside the enclosure. Remove the screw located on the back panel and open the cover to configure the jumpers.




DIO mode configurations are shown above (Default: DO Mode).



Analog mode configurations are shown above (Default: Voltage Mode).

DOs on the ioLogik E1213 have 3 possible external (EXT) power configurations, which are shown to the right. Only one field power can be selected at a time (JP10 / 12V JP5 / 9V JP11) and the jumper must be inserted vertically, not horizontally (Default: Field Power JP10).

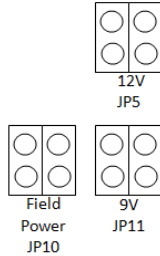


**NOTE** The ioLogik E1213 has 4 pure DO channels and 4 hybrid DIO channels. For the 4 pure DO channels, you can use the jumpers to select the power configuration output (i.e., field power, 12 V, 9 V). But for the 4 hybrid DIO channels, you cannot use the jumpers to select the power configuration output. Instead, you can only use the jumpers to set the DIO channels to either DI mode or DO mode.



# I/O Wiring

## Digital Inputs/Outputs


DI Dry Contact




DI Wet Contact



DO (Sink)





DO (Source)




## Analog Inputs/Outputs

Voltage/  
Current

0-10V 4-20 mA

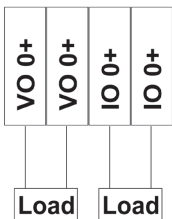


## Relay Output (Form A)




## RTD Inputs


2-Wire RTD

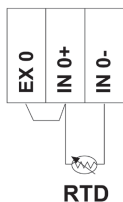

3-Wire RTD

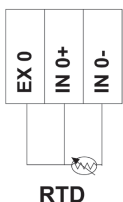

## TC Inputs

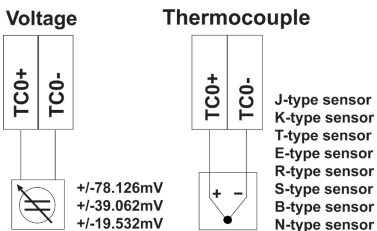


**NOTE** A “load” in a circuit schematic is a component or portion of the circuit that consumes electric power. For the diagrams shown in this document, “load” refers to the devices or systems connected to the remote I/O unit.


## Mounting

There are two sliders on the back of the unit for DIN rail and wall mounting.

1. **Mounting on a DIN rail:** Pull out the bottom slider; latch the unit onto the DIN-rail, and push the slider back in.
2. **Mounting on the wall:** Pull out both the top and bottom sliders and align the screws accordingly.

## Connecting the Power

Connect the +12 to +36 VDC power line to the ioLogik E1200’s terminal block V+ terminal; connect the ground from the power supply to the V- terminal. Connect the ground pin (  ) if earth ground is available.

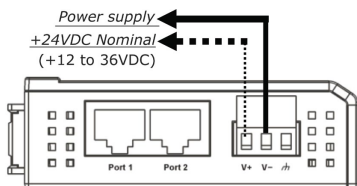

**NOTE** For safety reasons, wires connecting the power supply should be at least 2 mm in diameter (e.g., 12 gauge wires).

## Connecting to the Network

The ioLogik E1200 has two built-in RJ45 Ethernet ports for connecting standard direct or cross-over Ethernet cables.

## LED Indicators

Type	Color	Description
Power	Amber	System power is ON
	Off	System power is OFF
Ready	Green	System is ready
	Flashing	Flashes every 1 sec when the "Locate" function is triggered
	Flashing	Flashes every 0.5 sec when the firmware is being upgraded
	Flashing	An on/off period cycle: 0.5 second shows "Safe Mode"
	Off	System is not ready.
Port 1	Green	Ethernet connection enabled
	Flashing	Transmitting or receiving data
Port 2	Green	Ethernet connection enabled
	Flashing	Transmitting or receiving data
EXT (E1213 only)	Green	EXT field power input is connected
	Off	EXT field power input is disconnected

## System Configuration

### Configuration via Web Console

Main configuration of an ioLogik E1200 is by web console.

- Default IP Address: 192.168.127.254
- Subnet Mask: 255.255.255.0

**NOTE** Be sure to configure the host PC's IP address to the same subnet as the ioLogik E1200. For example, 192.168.127.253

### ioSearch Utility

ioSearch is a search utility that helps users locate an ioLogik E1200 on the local network. The utility can be downloaded from Moxa's website.

### Load Factory Default Settings

There are three ways to restore the ioLogik E1200 to factory default settings.

1. Hold the RESET button for 5 seconds.
2. In the ioSearch utility, right-click on the ioLogik device to be reset and select **Reset to Default**.
3. Select **Load Factory Default** from the web console.

**NOTE** Please refer to the user's manual for detailed configuration and settings information.

## How to Download the Software

**Step 1:** Click on the following link to open the Support & Downloads search tool:

[http://www.moxa.com/support/support\\_home.aspx?isSearchShow=1](http://www.moxa.com/support/support_home.aspx?isSearchShow=1)

**Step 2:** Type the model name in the search box or select a product from the drop down box and then click **Search**.

### Support & Downloads

2512-HSPA

OR

select product ▼

Please choose a model :

- ioLogik 2512-HSPA

**Step 3:** Click the **Software Packages** link to download the latest software for the product.

## ioLogik 2512-HSPA

<b>Documentation</b> <ul style="list-style-type: none"><li>• Datasheets</li><li>• Manuals</li></ul>	<b>Software</b> <ul style="list-style-type: none"><li>• Firmware</li><li>• Libraries</li><li>• <b>Software Packages</b></li><li>• Utilities</li></ul>	<b>Other</b> <ul style="list-style-type: none"><li>• Product Page</li></ul>
---	---	---

## ATEX Information



1. Certificate number: DEMKO 13 ATEX 1210600X
2. Certification string: Ex nA nC IIC T3 Gc
3. Standards covered:  
EN 60079-0:2012+A11:2013, EN 60079-15:2010
4. These products are to be installed in an ATEX Certified IP54 enclosure and accessible only by the use of a tool.
5. These products are for use in an area of not more than pollution degree 2 in accordance with IEC 60664-1.